

**Error Code Output  
(Air Top 2000 Diagnosis)**

When equipped with a combination or standard timer a malfunction will cause an error code output to the display of the timer for indication.

**NOTE**

When equipped with a control element the error code output is indicated by flashing of the operating indicator/ error code indication. The number of flash pulses corresponds to the number indicated in the table below. After a quick pulse train there will always be an error code output.

**Error code output on display of combination or standard timer**

F 01	No start (after 2 attempts)
F 02	Flame out (at least > 5)
F 03	Voltage too low or too high
F 04	Premature flame detection
F 05	Flame sensor open or short circuit
F 06	Temperature sensor open or short circuit
F 07	Dosing pump open or short circuit
F 08	Fan motor open or short circuit or wrong speed
F 09	Glow plug open or short circuit
F 10	Overheating