

Error Code Output

When equipped with a combination timer a malfunction will output an error code to the timer display.

NOTE

When equipped with a control element the error code output after a malfunction will be a flashing operating indicator light/error code indication. The flash pulses correspond to the number of the table below. After a rapid pulse train there will always be an error code output.

Error code output on display of combination timer

F 00	control unit malfunction / wrong parameter set / warm start detection
F 01	no start (after 2 start attempts) / no flame-up
F 02	flame-out (repeated > 5)
F 03	voltage too low or too high
F 04	premature flame detection
F 06	temperature sensor open circuit or temperature sensor short circuit
F 07	dosing pump open circuit or dosing pump short circuit
F 08	fan motor open circuit or fan motor short circuit or fan motor wrong speed
F 09	glow plug/flame sensor open circuit or glow plug/flame sensor short circuit
F 10	overheating
F 11	temperature limiter open circuit or temperature limiter short circuit
F 12	control element (open circuit/short circuit)