



## Electrical system

## Air Top 2000 STC / Evo 40 / Evo 55

### 9.7. Optional control elements

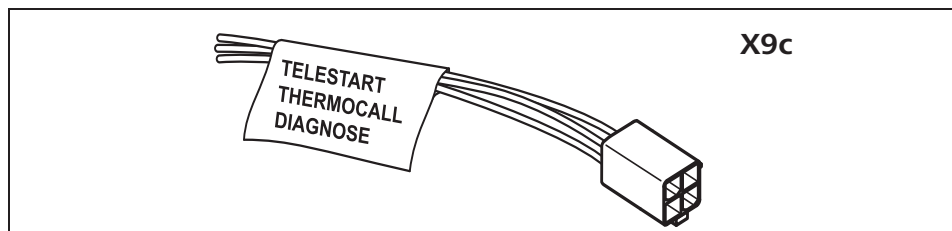


Fig. 47 Connector for Telestart / ThermoCall / Webasto Thermo Test/ MultiControl

#### - Multicontrol

The Multicontrol control element features additional operating modes such VENTILATION and TIMER.

- Connect X9(c) connector housing to the connector for the MultiControl control element.
- Install the control element in accordance with the supplied Installation Instructions for the MultiControl.

#### - Telestart / ThermoCall

X9c connector can be connected to the optional Telestart remote control or the Thermo Call remote control.

#### - Combi timer

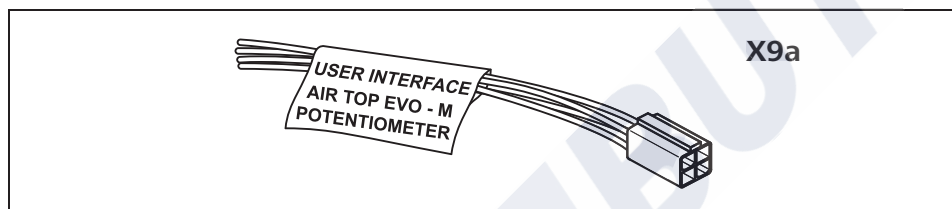


Fig. 48 Connector for Combi timer

Use the adapter wiring harness to install the Combi timer and connect it as shown in the wiring diagram (See "Wiring diagrams" from Page 38.).

Use the fuses F2 and, if necessary, also F4 for separate display lighting.

### 9.8. PC diagnosis, CO<sub>2</sub> calibration

- X9c connector (see Fig. 32 and Fig. 33) can also be used for Webasto Thermo Test PC diagnosis.
- Use X15 connector for CO<sub>2</sub> calibration (only for Webasto service workshops). See Fig. 49.

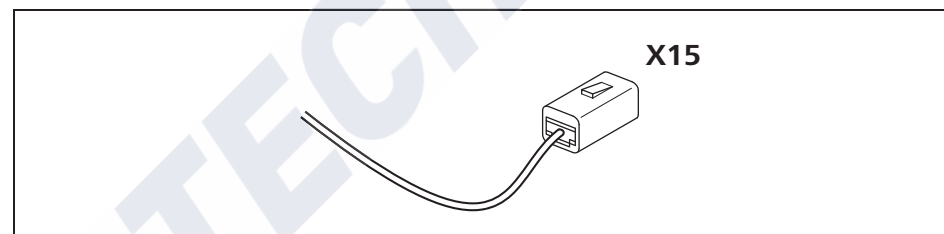


Fig. 49 Connector for CO<sub>2</sub> calibration

### 9.9. Fuel pump

The wiring harness for the DP42 fuel pump is routed out of the combustion air intake connection piece. Pull out the stowed cable (do not push it back in) and connect it to the fuel pump; see wiring diagram. Use an extension cable if it is not long enough (accessory).