




Pin No.	Remarks
1	Power supply + (terminal 30)
2	Power supply - (terminal 31)
3	Auxiliary drive
4	Terminal D+
5	W-bus (Webasto Thermo Test Diagnosis connection)
6	K-bus
7	CO2 setting
8	external temperature sensor +
9	external temperature sensor -
10	Setpoint sensor +
11	Setpoint sensor -
12	Input, switch-on signal (ON/OFF)
13	Power supply, control element / error code output
14	Output, vehicle fan relay/output, battery disconnecter afterrunning signal
15	Output, battery disconnecter afterrunning signal/output, vehicle fan relay
16	Input, Ventilate (only for operation with control elements without W-bus)
17	Not used
18	Not used

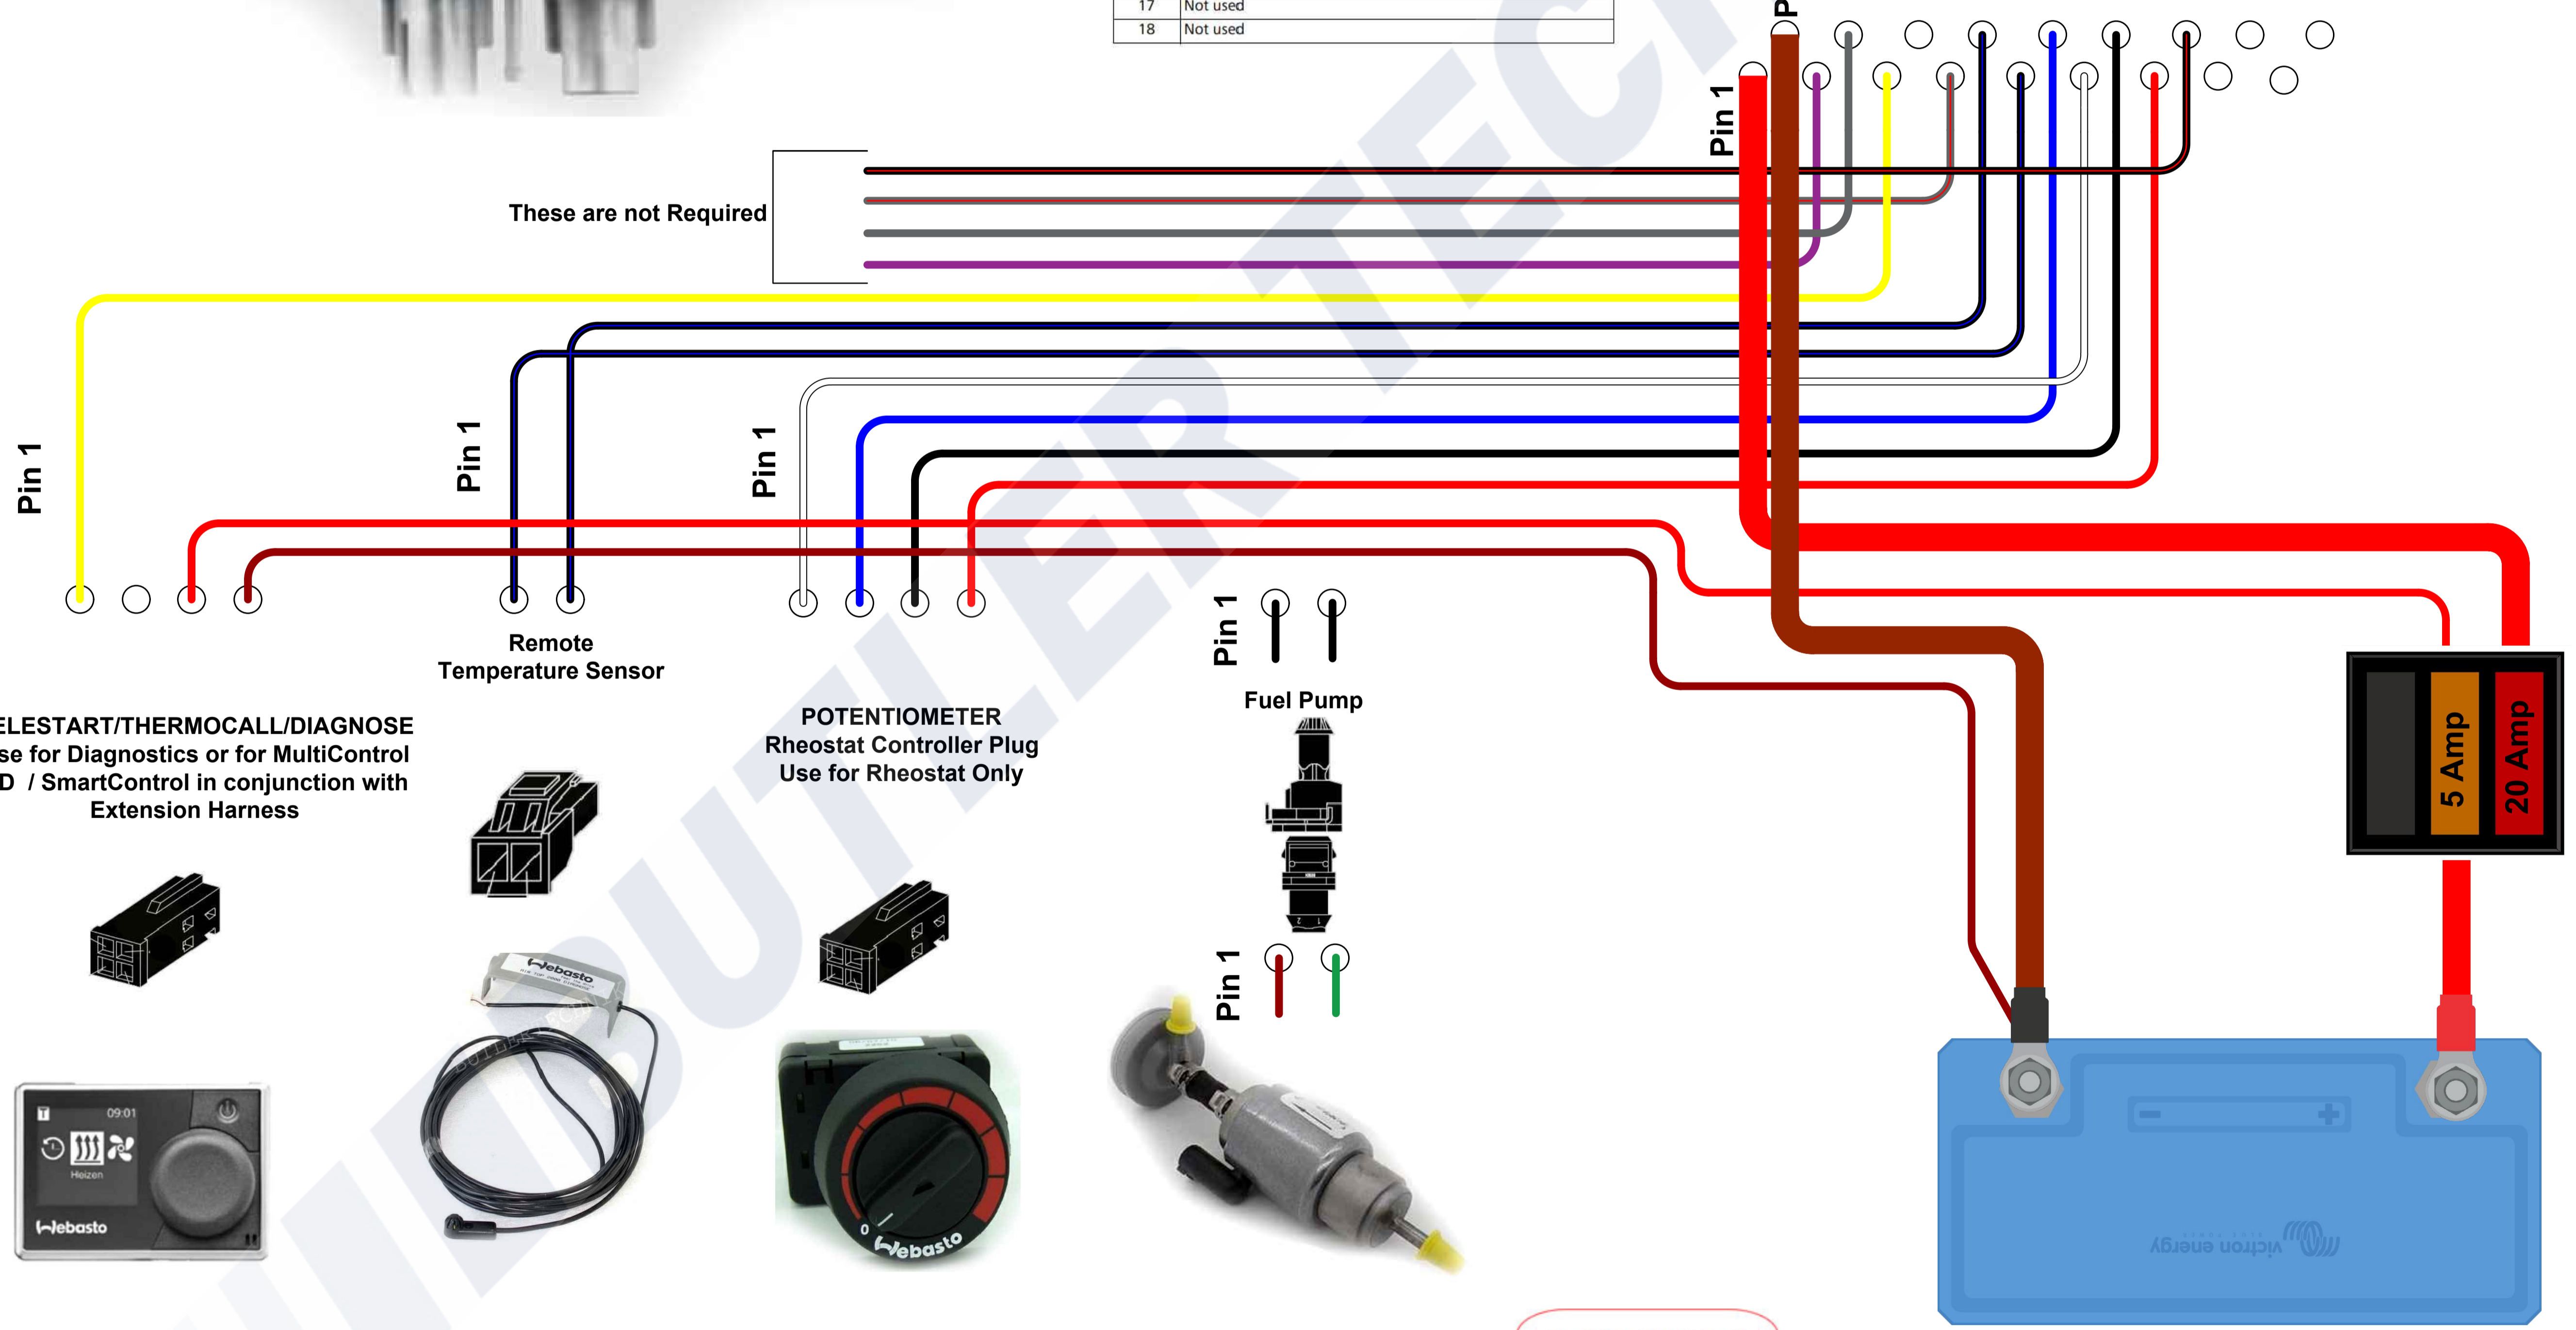

TELESTART/THERMOCALL/DIAGNOSE
Use for Diagnostics or for MultiControl HD / SmartControl in conjunction with Extension Harness

Remote Temperature Sensor

POTENTIOMETER Rheostat Controller Plug
Use for Rheostat Only

Fuel Pump

UNCONTROLLED COPY



Itemref	Butler Technik - Electrical Schematic	Article No./Reference
Designed by	S Marston	Scale
Checked	S Marston	1:1
Approved by - date	20-06-2023	Date
Filename	Webasto	20/06/23
ButlerBus Technik Ltd		Webasto Air Top 2000 STC
Edition 1		Sheet 1/1